



## B 5230: Assembly Kit / H51q-M: System

System H51q-M in K 1412B system subrack, 5 HU, 19 inches with single channel central module, power supply 24/5 V, power supply monitoring module, I/O bus connection, communication modules (optional), coprocessor modules (optional) and three fans

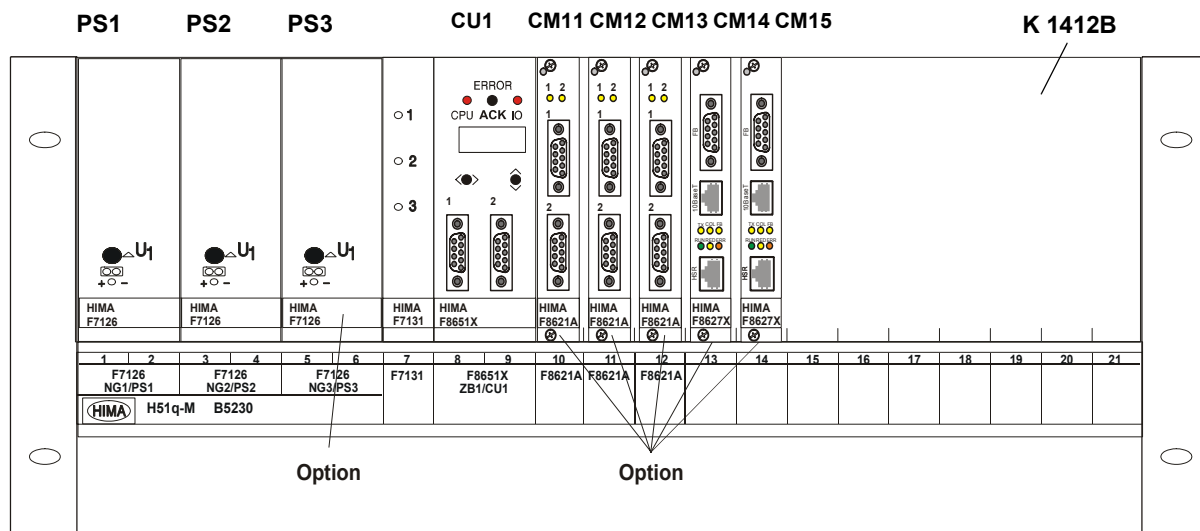


Figure 1: Front view

## 1 Parts of the B 5230 assembly kit / H51q-M system

- 1 x K 1412B central rack, 5 units high, 19 inches, with cable tray with three fan modules K 9212, hinged receptacle for the label and backplane Z 1001.
- additional modules on the rear
  - 3 x Z 6011 decoupling and fusing to feed the power supply modules
  - 1 x Z 6018 fan run monitoring and fuse monitoring
  - 2 x Z 6013 decoupling and fusing of the supply voltage for the WD signal
  - 2 x F 7546 bus termination modules

includes the modules:

- 2 x F 7126 power supply modules 24 V / 5 V, 10 A (PS1, PS2)
- 1 x F 7131 power supply monitoring
- 1 x F 8651X central module (CU1)

modules for option (separate order)

- 3 x F 8621A coprocessor module (CM11 - CM13)
- 5 x communication modules (CM11 - CM15)
- 1 x F 7126 power supply module 24 V / 5 V, 10 A (PS3)

Assembly kits to be used for the I/O level:

- B 9302 I/O subrack 4 units high, 19 inches
- B 9361 additional power supply, 5 VDC, 5 units high, 19 inches

The max. current must be 18 A (all I/O modules and the modules in the central rack), if 3 x F 7126 are used to keep the system in operation even one power supply module F 7126 has failed.

Values of the current requirement (+5 V DC) refer to the data sheets.


**Note****Operating system/resource type in ELOP II**

The assembly kit is usable since operating system BS41q/51q V7.0-8.  
Resource type in ELOP II: H51qe-M.

## 2 Modules

### 2.1 Central module F 8651X

The central module of the PES H51q-M contains the essential functions demonstrated in the block diagram of the central module:

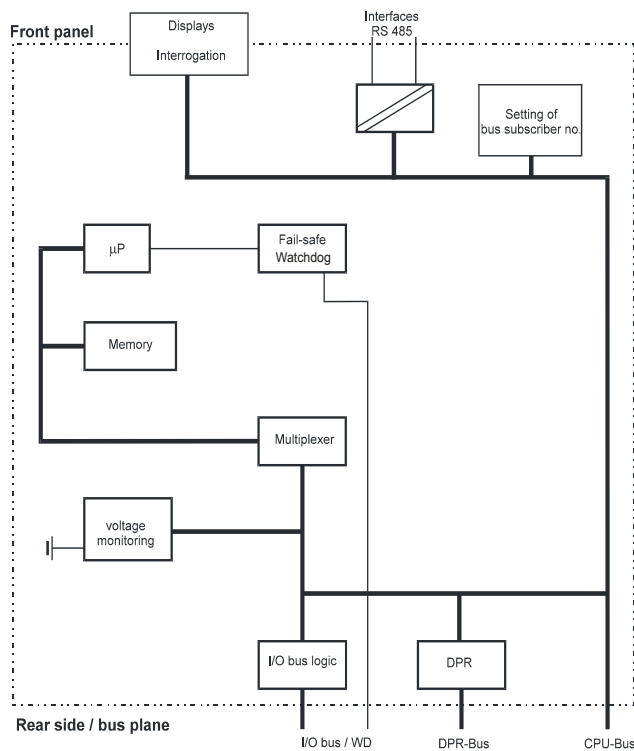

**Figure 2: Block diagram of the central module F 8651X**

- Microprocessor
- Flash-EPROMs of the program memory for the operating system and the user program usable for min. 100,000 writing cycles
- Data memory in sRAM
- Dual Port RAM for fast memory access to the second central module (not used in the H51q-M system)
- 2 interfaces RS 485 with galvanic isolation. Transmission rate: max. 57600 bps
- 4digit diagnostic display and 2 LEDs for information out of the system, I/O level and user program
- Power supply monitoring
- I/O bus logic for the connection to the input/output modules
- Hardware clock, battery buffered
- Watchdog
- Battery backup of the sRAMs via batteries on the central module with monitoring

## 2.2 Coprocessor module F 8621A

Right of each installed central module of the H51q-M PES up to three coprocessor modules can be installed. The coprocessor module mainly contains:

- Microprocessor HD 64180 with a clock frequency of 10 MHz
- Operating system EPROM
- RAM for a PLC master project

---

|             |  |
|-------------|--|
| <b>Note</b> | The RAM for the master project is buffered via the batteries on the power supply monitoring module F 7131. |
|-------------|--|

---

- Two interfaces RS 485, via communication software function block setting of the baud rate up to 57600 bps
- Dual port RAM (DPR) for the communication with the central module via CPU bus

## 2.3 Communication modules F 8627/F 8628, F 8627X/F 8628X

Right of the installed central module of the H51q-M PES up to five communication modules can be installed. The communication module mainly contains:

- 32-bit RISC microprocessor
- Operating system
- RAM for further protocols
- F 8627 Ethernet interface (safeethernet, OPC, ...)
- F 8628 Profibus-DP slave interface
- Dual port RAM (DPR) for the communication with the central module via CPU bus

**Special applications with the communication module F 8627X:**

- connection of the central module to a PADT (ELOP II TCP)
- connection to other communication partners within an Ethernet network (Modbus TCP)

**Special application with the communication module F 8628X:**

- ELOP II TCP connection (PADT) via the Ethernet interface of the F 8628X to the H41q/H51q controller

## 3 Startup and maintenance

A battery change of the buffer batteries on the power supply monitoring module and the central module (CPU in operation) is recommended every 6 years.

Buffer battery with soldering lug: HIMA part no. 44 0000016.

Buffer battery without soldering lug: HIMA part no. 44 0000019.

Further informations see also catalog H41q/H51q, chapter 9, "Startup and maintenance".

## 4 Wiring of the assembly kit

The assembly kit is already wired for operation. Wirings have still to be done by the user (optional modules, see "Assembly kit, wiring diagram").



With installation of the assembly kit a conductive connection to the frame or a separate earth connection has to be installed according to the EMC requirements.

Connection PE earth: Faston 6.3 x 0.8 mm.

Pay attention for the manufacturers information concerning detaching and replugging of the Faston connectors!

---

## 4.1 Current distribution within the assembly kit

### 4.1.1 HIMA devices for current distribution

It is recommended to use the HIMA supplies and current distributions:

- K 7212** redundant feeding up to 35 A total current, with 2 decoupling diodes and 2 network filters, with fusing of up to 12 single circuits with circuit breakers or
- K 7213** redundant feeding up to 35 A total current, with fusing of up to 12 single circuits with circuit breakers or
- K 7214** redundant feeding up to 150 A total current, with fusing of up to 18 single circuits with circuit breakers or
- K 7215** redundant feeding up to 150 A total current, with fusing of up to 18 single circuits with circuit breakers, graphical display.

### 4.1.2 Supply 24 VDC

The 24 VDC power supply can be feeded three times to the system H51q-M (starlike wiring). See also catalog H41q/H51q, chapter 4.3, The Input/Output Level, 24 VDC Supply and Distribution.

| Connection          | Wire and connection                       | Fusing                | Use               |
|---------------------|---|-----------------------|-------------------|
| XG.21/22/23:2 (L+)  | RD 2.5 mm <sup>2</sup> , Faston 6.3 x 0.8 | max. 16 A gL          | PS1...PS3         |
| XG.21/22/23:1 (L-)  | BK 2.5 mm <sup>2</sup> , Faston 6.3 x 0.8 |                       | Reference pole L- |
| RD = Color code red |   | BK = Color code black |                   |

Table 1: Supply 24 VDC

### 4.1.3 Output 24 VDC

| Connection          | Wire and connection                       | Use   |
|---------------------|---|---|
| XG.24:2 (L+)        | RD 1.5 mm <sup>2</sup> , Faston 6.3 x 0.8 | Supply fuse monitoring and IO-CON in the I/O rack |
| RD = Color code red |   |   |

Table 2: Output 24 VDC

### 4.1.4 Supply 5 VDC

The 5 VDC power supply does not have to be wired extra as it is already part of the installation. To supply the I/O racks the 5 V power supply with corresponding GND is available at the rear side of the central rack.

The 5 VDC power and GND are connected starlike with each 2 wires to the potential distributor.

The 5 VDC power needed for the microprocessor system and as control current for the I/O modules is generated from the 24 VDC power of the system via (24 VDC / 5 VDC) power supply modules type F 7126. One central rack can be equipped with a maximum of 3 power supply modules. The power supply modules are switched in parallel. One or two power supply modules are usually able to supply the PES. A further power supply module is used to increase availability.

---

**Note** At planning the load of the power supply units have to be calculated.

---

The 5 VDC output voltage of the power supply module (for the CPU, I/O and the interfaces) are monitored by the power supply monitoring module F 7131 checking undervoltage, over-voltage or failure.

In case of a faulty power supply module the operating system of the CPU informs the user program via a system variable.

In case of a 5 VDC system power failure a lithium battery on the central module buffers the hardware clock and sRAM on the central module.

The sRAM memory of the coprocessor module is buffered via two lithium batteries on the power supply monitoring module F 7131.

#### 4.1.5 Output 5 VDC

| Connection  | Wire and connection                           | Use                         |
|---|---|-----------------------------|
| XG.2: +5 V  | YE 2 x 2.5 mm <sup>2</sup> , Faston 6.3 x 0.8 | Supply I/O subrack (B 9302) |
| XG.3: GND   | GN 2 x 2.5 mm <sup>2</sup> , Faston 6.3 x 0.8 | Supply I/O subrack (B 9302) |
| GN = Color code green                      YE = Color code yellow |   |                             |

**Table 3: Output 5 VDC**

#### 4.2 Output WD

| Connection           | Wire and connection                       | Use               |
|----------------------|---|-------------------|
| XG.1:2 (4)           | GY 0.5 mm <sup>2</sup> , wire end ferrule | WD to I/O subrack |
| GY = Color code gray |   |                   |

**Table 4: Output WD**

#### 4.3 Connection of the monitoring loop (for fuses and fans)

| Connection           | Wire and connection                       | Fusing             | Use                                  |
|----------------------|---|--------------------|--------------------------------------|
| XG.26:4/5/6          | GY 0.5 mm <sup>2</sup> , Faston 2.8 x 0.8 | max. 4 A slow blow | Floating NO/NC contact for signaling |
| GY = Color code gray |   |                    |                                      |

**Table 5: Connection of the monitoring loop**

## 4.4 Internal fuses

| Position | Size            | Dimension | HIMA part no. |
|----------|-----------------|-----------|---------------|
| Z 6011   | 4 A slow blow   | 5 x 20 mm | 57 0174409    |
| Z 6013   | 1.6 A slow blow | 5 x 20 mm | 57 0174169    |

**Table 6: Internal fuses**

## 4.5 I/O bus

The data connection of the I/O level with the central module is established via the I/O bus.


| Connection | Procedure  |
|------------|--|
| XD.4       | Remove bus termination module F 7546 and plug it on XD.2 of the last I/O rack, then connect cable BV 7032 there and plug it on XD.1 of the 1st I/O rack. |

**Table 7: I/O bus connection**

For the I/O rack the connection to the I/O bus is made via a coupling module F 7553 installed in slot 17. The connection of the bus between the individual subracks is established at the rear side via the BV 7032 data cable.

To terminate the I/O bus, an F 7546 module is plugged in at the beginning on central subrack and at the end (last I/O rack).

4.5.1 Construction principle of the I/O bus of the system H51q-M

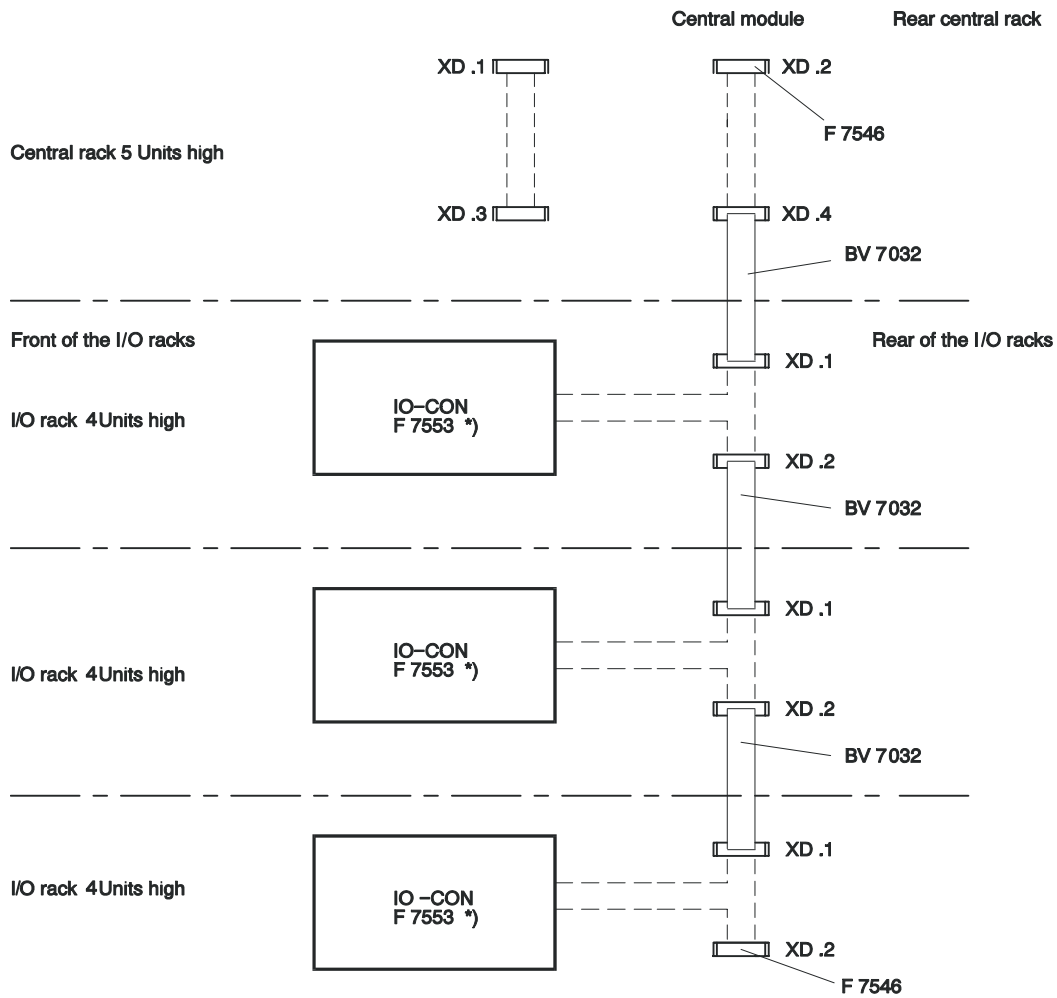

\*) Set I/O rack address by means of a coding switch (refer to data sheet F 7553)

Figure 3: Construction principle of the I/O bus for system H51q-M

|                                 |            |
|---------------------------------|------------|
| max. length I/O bus:            | 12 m       |
| max. length cable BV 7032:      | 5 m        |
| cable BV 7032 between subracks: | max. 0.5 m |





## 4.7 Assembly kit, wiring diagram

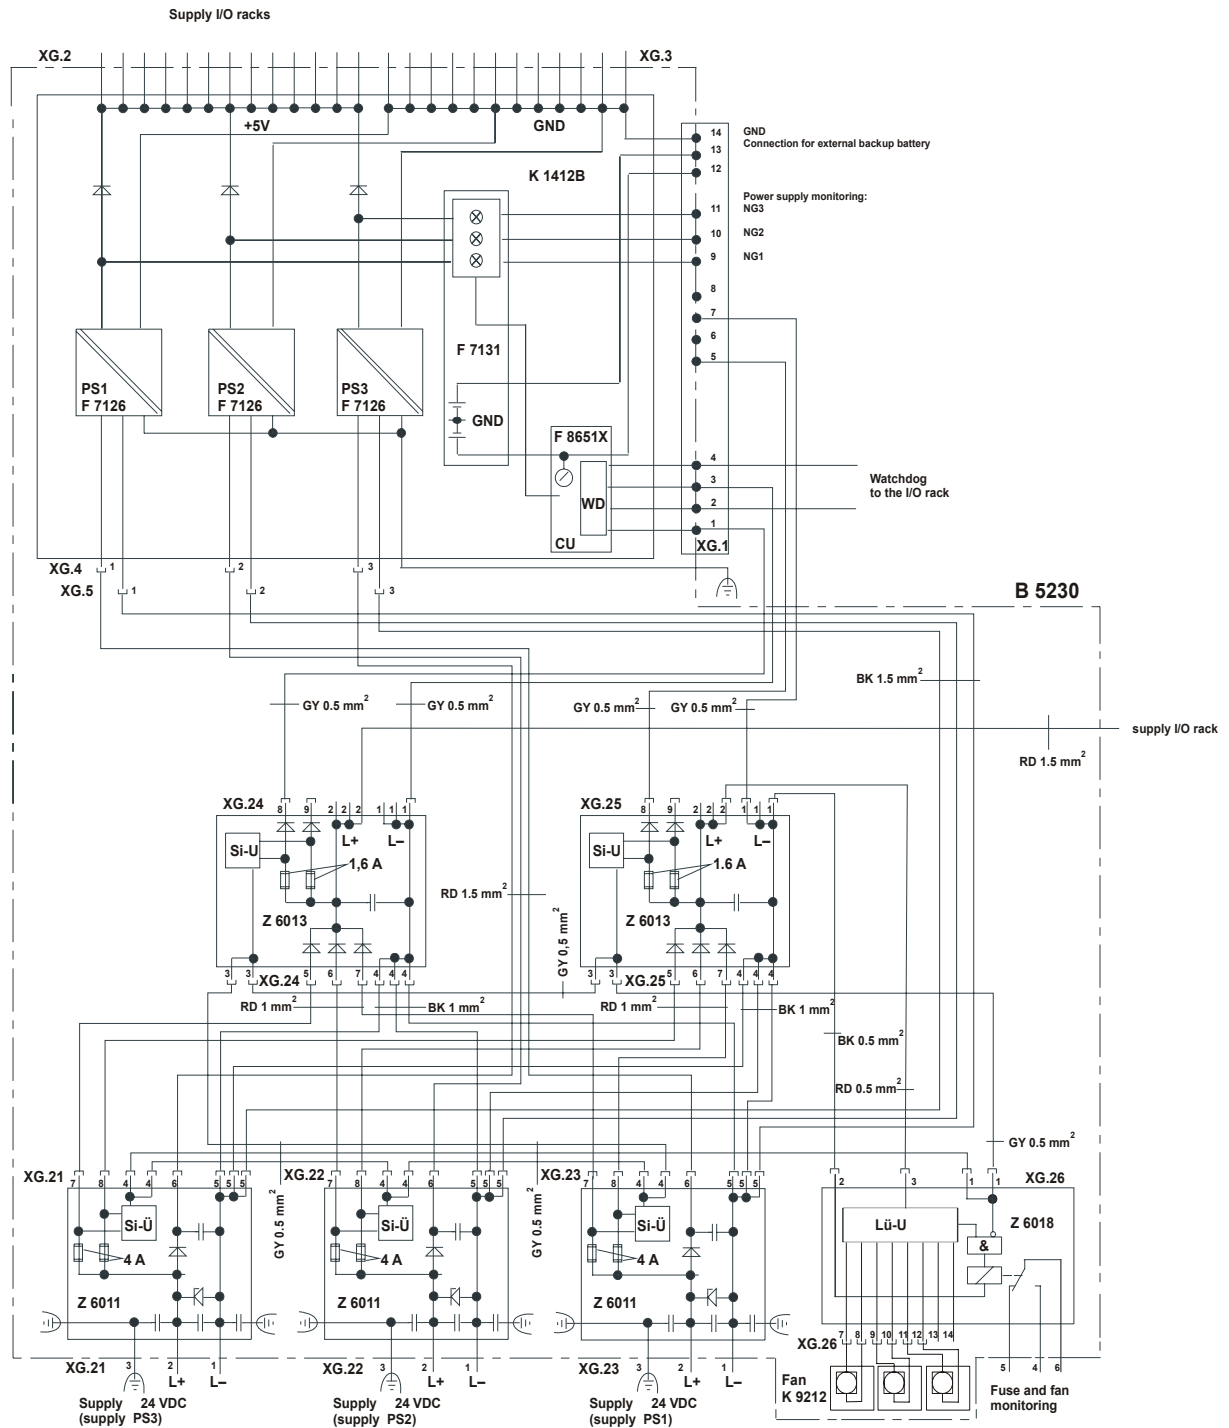


Figure 5: Assembly kit, wiring diagram

Lü-Ü = Fan monitoring  
 Si-Ü = Fuse monitoring

# 5 Side view B 5230 assembly kit / H51q-M system

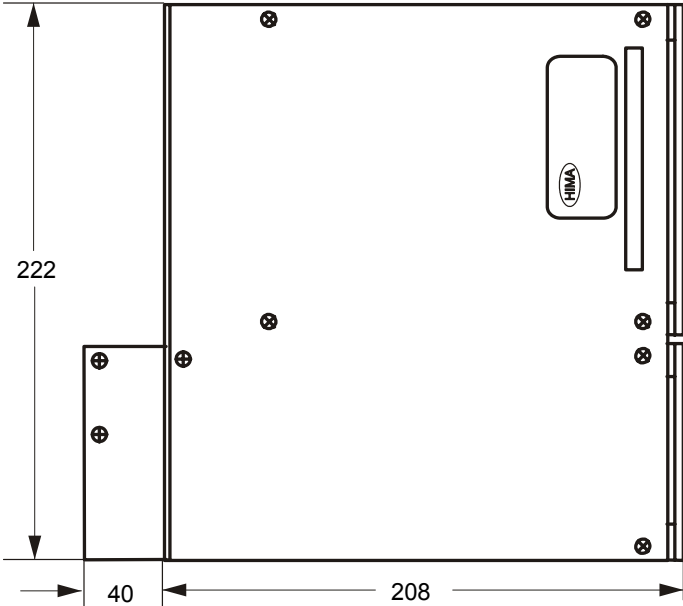


Figure 6: Side view